



WARNING

HEALTH AND SAFETY AT WORK ACT 1974

Users of the JR Industries Ltd Doors are reminded of their obligation to ensure that all persons involved in handling, using, maintaining or disposing of this product, are made aware of these instructions.



STAND CLEAR OF OPENING
WHEN DOOR IS MOVING

ALWAYS CLOSE AND LOCK THE DOOR BEFORE DRIVING VEHICLE

DO NOT MOVE VEHICLE WITH DOOR IN THE UNDER ROOF POSITION

IMPORTANT MAINTENANCE INFORMATION

The following should be read and included in the Maintenance Schedule

This door is constructed of high quality components intended to provide years of continued service.

When in operation it is a large moving object, therefore, to ensure safe, reliable and continued operation, the following cautionary directions and periodic maintenance instructions must be observed.

1. While door is moving do not stand within opening or walk through doorway.
2. Operate door only when correctly adjusted and free from obstructions.
3. High-pressure cleaners or solvents can damage the door.
4. If door becomes difficult to operate or completely inoperative, it must be repaired immediately by an approved agent. Particular care should be given to the counter balance and cables. Repair and adjustment can be **hazardous** and should only be performed by an **approved agent**.
5. **Daily:-** A general visual inspection of the shutter should be carried out, with specific attention to the cable along the full length.
6. Replace any frayed or otherwise damaged cables.
7. Ensure regular checks and maintenance on items shown below **(Every 6-8 weeks)**
 - All nuts, bolts, screws and rivets to be checked for tightness.
 - Check all rollers operate smoothly, replace worn or damaged rollers.
 - Replace frayed or worn Pull Straps. **DO NOT** attach anything to the Pull Strap.
 - Where lock mechanism is fitted or controlled by a keyed cylinder lubricate the cylinder, **ONLY** with manufacturer's recommended lubricant.
 - Other parts of the lock mechanism can be lubricated with light oil.
 - Tracks must be clear of grease and dirt.
 - Check roller shutter operation, lubricate roller shafts, bearings, hinges, tracks and spring with light oil **(not grease)** the use of aerosol sprays is not recommended as this may wash away the lubricant packed in the roller bearings.
 - Check door panels (inside and out) for gouges or paint chips, and repaint as needed.
 - If you repaint, check and if necessary re-adjust tension on lifting mechanism to restore ease of operation.

Use only genuine JR Industries spare parts; the use of any other manufactured parts or not following the above will invalidate the warranty. In the unlikely event of an operational or warranty concern please contact:

Customer Services 029 2054 6135

Mobile 07974 390511

JR Industries has a network of Agents for your nearest Agent please contact:

JR Industries Ltd.

Whiting House, Sir Alfred Owen Way, Pontygwindy Industrial Estate, Caerphilly CF83 2WH

Tel: +44 (0)29 2085 7630

or visit www.jrindustries.co.uk